
AdafruitCAP1188 Library Documentation

Release 1.0

Carter Nelson

Jan 23, 2020

Contents

1	Dependencies	3
2	Installing from PyPI	5
3	Usage Example	7
4	Contributing	9
5	Documentation	11
6	Table of Contents	13
6.1	Simple test	13
6.2	adafruit_cap1188.cap1188	13
6.2.1	Implementation Notes	14
6.3	adafruit_cap1188.i2c	14
6.3.1	Implementation Notes	15
6.4	adafruit_cap1188.spi	15
6.4.1	Implementation Notes	15
7	Indices and tables	17
	Python Module Index	19
	Index	21

CircuitPython driver for the CAP1188 8-Key Capacitive Touch Sensor Breakout.

CHAPTER 1

Dependencies

This driver depends on:

- [Adafruit CircuitPython](#)
- [Bus Device](#)

Please ensure all dependencies are available on the CircuitPython filesystem. This is easily achieved by downloading the [Adafruit library and driver bundle](#).

CHAPTER 2

Installing from PyPI

On supported GNU/Linux systems like the Raspberry Pi, you can install the driver locally [from PyPI](#). To install for current user:

```
pip3 install adafruit-circuitpython-cap1188
```

To install system-wide (this may be required in some cases):

```
sudo pip3 install adafruit-circuitpython-cap1188
```

To install in a virtual environment in your current project:

```
mkdir project-name && cd project-name
python3 -m venv .env
source .env/bin/activate
pip3 install adafruit-circuitpython-cap1188
```


CHAPTER 3

Usage Example

See usage examples in the examples folder.

CHAPTER 4

Contributing

Contributions are welcome! Please read our [Code of Conduct](#) before contributing to help this project stay welcoming.

CHAPTER 5

Documentation

For information on building library documentation, please check out [this guide](#).

6.1 Simple test

Ensure your device works with this simple test.

Listing 1: examples/cap1188_simpletest.py

```
1 import board
2 import busio
3
4 # I2C setup
5 from adafruit_cap1188.i2c import CAP1188_I2C
6 i2c = busio.I2C(board.SCL, board.SDA)
7 cap = CAP1188_I2C(i2c)
8
9 # SPI setup
10 # from digitalio import DigitalInOut, Direction
11 # from adafruit_cap1188.spi import CAP1188_SPI
12 # spi = busio.SPI(board.SCK, board.MOSI, board.MISO)
13 # cs = DigitalInOut(board.D5)
14 # cap = CAP1188_SPI(spi, cs)
15
16 while True:
17     for i in range(1, 9):
18         if cap[i].value:
19             print("Pin {} touched!".format(i))
```

6.2 adafruit_cap1188.cap1188

CircuitPython driver for the CAP1188 8-Key Capacitive Touch Sensor Breakout.

- Author(s): Carter Nelson

6.2.1 Implementation Notes

Hardware:

- CAP1188 - 8-Key Capacitive Touch Sensor Breakout

Software and Dependencies:

- Adafruit CircuitPython firmware for the supported boards: <https://github.com/adafruit/circuitpython/releases>
- Adafruit's Bus Device library: https://github.com/adafruit/Adafruit_CircuitPython_BusDevice

```
class adafruit_cap1188.cap1188.CAP1188
    CAP1188 driver base, must be extended for I2C/SPI interfacing.

    delta_count (pin)
        Return the 8 bit delta count value for the channel.

    recalibrate ()
        Perform a self recalibration on all the pins.

    recalibrate_pins (mask)
        Recalibrate pins specified by bit mask.

    sensitivity
        The sensitivity of touch detections. Range is 1 (least) to 128 (most).

    threshold_values ()
        Return tuple of touch threshold values for all channels.

    thresholds
        Touch threshold value for all channels.

    touched ()
        Return 8 bit value representing touch state of all pins.

    touched_pins
        A tuple of touched state for all pins.

class adafruit_cap1188.cap1188.CAP1188_Channel (cap1188, pin)
    Helper class to represent a touch channel on the CAP1188. Not meant to be used directly.

    raw_value
        The raw touch measurement.

    recalibrate ()
        Perform a self recalibration.

    threshold
        The touch threshold value.

    value
        Whether the pin is being touched or not.
```

6.3 adafruit_cap1188.i2c

CircuitPython I2C driver for the CAP1188 8-Key Capacitive Touch Sensor Breakout.

- Author(s): Carter Nelson

6.3.1 Implementation Notes

Hardware:

- [CAP1188 - 8-Key Capacitive Touch Sensor Breakout](#)

Software and Dependencies:

- Adafruit CircuitPython firmware for the supported boards: <https://github.com/adafruit/circuitpython/releases>
- Adafruit's Bus Device library: https://github.com/adafruit/Adafruit_CircuitPython_BusDevice

class `adafruit_cap1188.i2c.CAP1188_I2C` (*i2c, address=41*)
Driver for the CAP1188 connected over I2C.

6.4 `adafruit_cap1188.spi`

CircuitPython SPI driver for the CAP1188 8-Key Capacitive Touch Sensor Breakout.

- Author(s): Carter Nelson

6.4.1 Implementation Notes

Hardware:

- [CAP1188 - 8-Key Capacitive Touch Sensor Breakout](#)

Software and Dependencies:

- Adafruit CircuitPython firmware for the supported boards: <https://github.com/adafruit/circuitpython/releases>
- Adafruit's Bus Device library: https://github.com/adafruit/Adafruit_CircuitPython_BusDevice

class `adafruit_cap1188.spi.CAP1188_SPI` (*spi, cs*)
Driver for the CAP1188 connected over SPI.

CHAPTER 7

Indices and tables

- `genindex`
- `modindex`
- `search`

a

`adafruit_cap1188.cap1188`, [13](#)
`adafruit_cap1188.i2c`, [14](#)
`adafruit_cap1188.spi`, [15](#)

A

`adafruit_cap1188.cap1188` (module), 13
`adafruit_cap1188.i2c` (module), 14
`adafruit_cap1188.spi` (module), 15

C

`CAP1188` (class in `adafruit_cap1188.cap1188`), 14
`CAP1188_Channel` (class in `adafruit_cap1188.cap1188`), 14
`CAP1188_I2C` (class in `adafruit_cap1188.i2c`), 15
`CAP1188_SPI` (class in `adafruit_cap1188.spi`), 15

D

`delta_count()` (`adafruit_cap1188.cap1188.CAP1188` method), 14

R

`raw_value` (`adafruit_cap1188.cap1188.CAP1188_Channel` attribute), 14
`recalibrate()` (`adafruit_cap1188.cap1188.CAP1188` method), 14
`recalibrate()` (`adafruit_cap1188.cap1188.CAP1188_Channel` method), 14
`recalibrate_pins()` (`adafruit_cap1188.cap1188.CAP1188` method), 14

S

`sensitivity` (`adafruit_cap1188.cap1188.CAP1188` attribute), 14

T

`threshold` (`adafruit_cap1188.cap1188.CAP1188_Channel` attribute), 14
`threshold_values()` (`adafruit_cap1188.cap1188.CAP1188` method), 14
`thresholds` (`adafruit_cap1188.cap1188.CAP1188` attribute), 14

`touched()` (`adafruit_cap1188.cap1188.CAP1188` method), 14

`touched_pins` (`adafruit_cap1188.cap1188.CAP1188` attribute), 14

V

`value` (`adafruit_cap1188.cap1188.CAP1188_Channel` attribute), 14