
Adafruit INA219 Library Documentation

Release 1.0

Dean Miller

Aug 25, 2020

Contents

| | | |
|----------|--------------------------------|-----------|
| 1 | Dependencies | 3 |
| 2 | Installing from PyPI | 5 |
| 3 | Usage Example | 7 |
| 4 | Contributing | 9 |
| 5 | Documentation | 11 |
| 6 | Table of Contents | 13 |
| 6.1 | Simple test | 13 |
| 6.2 | adafruit_ina219 | 14 |
| 6.2.1 | Implementation Notes | 14 |
| 7 | Indices and tables | 17 |
| | Python Module Index | 19 |
| | Index | 21 |

CircuitPython driver for the [INA219](#) current sensor.

CHAPTER 1

Dependencies

This driver depends on:

- Adafruit CircuitPython
- Bus Device
- Register

Please ensure all dependencies are available on the CircuitPython filesystem. This is easily achieved by downloading the Adafruit library and driver bundle.

CHAPTER 2

Installing from PyPI

On supported GNU/Linux systems like the Raspberry Pi, you can install the driver locally [from PyPI](#). To install for current user:

```
pip3 install adafruit-circuitpython-ina219
```

To install system-wide (this may be required in some cases):

```
sudo pip3 install adafruit-circuitpython-ina219
```

To install in a virtual environment in your current project:

```
mkdir project-name && cd project-name  
python3 -m venv .env  
source .env/bin/activate  
pip3 install adafruit-circuitpython-ina219
```


CHAPTER 3

Usage Example

see example

CHAPTER 4

Contributing

Contributions are welcome! Please read our [Code of Conduct](#) before contributing to help this project stay welcoming.

CHAPTER 5

Documentation

For information on building library documentation, please check out [this guide](#).

CHAPTER 6

Table of Contents

6.1 Simple test

Ensure your device works with this simple test.

Listing 1: examples/ina219_simpletest.py

```
1  """Sample code and test for adafruit_ina219"""
2
3  import time
4  import board
5  from adafruit_ina219 import ADCResolution, BusVoltageRange, INA219
6
7
8  i2c_bus = board.I2C()
9
10 ina219 = INA219(i2c_bus)
11
12 print("ina219 test")
13
14 # display some of the advanced field (just to test)
15 print("Config register:")
16 print(" bus_voltage_range: 0x%IX" % ina219.bus_voltage_range)
17 print(" gain: 0x%IX" % ina219.gain)
18 print(" bus_adc_resolution: 0x%IX" % ina219.bus_adc_resolution)
19 print(" shunt_adc_resolution: 0x%IX" % ina219.shunt_adc_resolution)
20 print(" mode: 0x%IX" % ina219.mode)
21 print("")
22
23 # optional : change configuration to use 32 samples averaging for both bus voltage_
24 # and shunt voltage
25 ina219.bus_adc_resolution = ADCResolution.ADCRES_12BIT_32S
26 ina219.shunt_adc_resolution = ADCResolution.ADCRES_12BIT_32S
27 # optional : change voltage range to 16V
```

(continues on next page)

(continued from previous page)

```
27 ina219.bus_voltage_range = BusVoltageRange.RANGE_16V
28
29 # measure and display loop
30 while True:
31     bus_voltage = ina219.bus_voltage    # voltage on V- (load side)
32     shunt_voltage = ina219.shunt_voltage  # voltage between V+ and V- across the shunt
33     current = ina219.current    # current in mA
34
35     # INA219 measure bus voltage on the load side. So PSU voltage = bus_voltage +_
36     # shunt_voltage
37     print("PSU Voltage:   {:.3f} V".format(bus_voltage + shunt_voltage))
38     print("Shunt Voltage: {:.6f} V".format(shunt_voltage))
39     print("Load Voltage:  {:.3f} V".format(bus_voltage))
40     print("Current:       {:.6f} A".format(current / 1000))
41     print("")
42
43     time.sleep(2)
```

6.2 adafruit_ina219

CircuitPython driver for the INA219 current sensor.

- Author(s): Dean Miller

6.2.1 Implementation Notes

Hardware:

- Adafruit INA219 High Side DC Current Sensor Breakout
- Adafruit INA219 FeatherWing

Software and Dependencies:

- Adafruit CircuitPython firmware (2.2.0+) for the ESP8622 and M0-based boards: <https://github.com/adafruit/circuitpython/releases>
- Adafruit's Bus Device library: https://github.com/adafruit/Adafruit_CircuitPython_BusDevice

```
class adafruit_ina219.ADCResolution
    Constants for bus_adc_resolution or shunt_adc_resolution

class adafruit_ina219.BusVoltageRange
    Constants for bus_voltage_range

class adafruit_ina219.Gain
    Constants for gain

class adafruit_ina219.INA219(i2c_bus, addr=64)
    Driver for the INA219 current sensor

    bus_voltage
        The bus voltage (between V- and GND) in Volts

    calibration
        Calibration register (cached value)
```

current

The current through the shunt resistor in millamps.

power

The power through the load in Watt.

set_calibration_16V_400mA()

Configures to INA219 to be able to measure up to 16V and 400mA of current. Counter overflow occurs at 1.6A.

Note: These calculations assume a 0.1 ohm shunt resistor is present

set_calibration_16V_5A()

Configures to INA219 to be able to measure up to 16V and 5000mA of current. Counter overflow occurs at 8.0A.

Note: These calculations assume a 0.02 ohm shunt resistor is present

set_calibration_32V_1A()

Configures to INA219 to be able to measure up to 32V and 1A of current. Counter overflow occurs at 1.3A.

Note: These calculations assume a 0.1 ohm shunt resistor is present

set_calibration_32V_2A()

Configures to INA219 to be able to measure up to 32V and 2A of current. Counter overflow occurs at 3.2A.

..note :: These calculations assume a 0.1 shunt ohm resistor is present

shunt_voltage

The shunt voltage (between V+ and V-) in Volts (so +-327V)

class adafruit_ina219.Mode

Constants for mode

CHAPTER 7

Indices and tables

- genindex
- modindex
- search

Python Module Index

a

adafruit_ina219, 14

Index

A

`adafruit_ina219` (*module*), 14
`ADCResolution` (*class in adafruit_ina219*), 14

B

`bus_voltage` (*adafruit_ina219.INA219 attribute*), 14
`BusVoltageRange` (*class in adafruit_ina219*), 14

C

`calibration` (*adafruit_ina219.INA219 attribute*), 14
`current` (*adafruit_ina219.INA219 attribute*), 14

G

`Gain` (*class in adafruit_ina219*), 14

I

`INA219` (*class in adafruit_ina219*), 14

M

`Mode` (*class in adafruit_ina219*), 15

P

`power` (*adafruit_ina219.INA219 attribute*), 15

S

`set_calibration_16V_400mA()`
 (*adafruit_ina219.INA219 method*), 15
`set_calibration_16V_5A()`
 (*adafruit_ina219.INA219 method*), 15
`set_calibration_32V_1A()`
 (*adafruit_ina219.INA219 method*), 15
`set_calibration_32V_2A()`
 (*adafruit_ina219.INA219 method*), 15
`shunt_voltage` (*adafruit_ina219.INA219 attribute*),
 15